

MASON JAR VASE



YOU WILL NEED:

- 1/2" Gauge Hardware Cloth
- Mason Jar
- Permanent Marker
- Safety Glasses
- Screw-Top Canning Band
- Wire Cutters
- Work Gloves



STEP 1




01

Gather your supplies.

Cut out a small sheet of hardware cloth. Your sheet should be big enough to cover however many mason jar tops that you have.

STEP 2

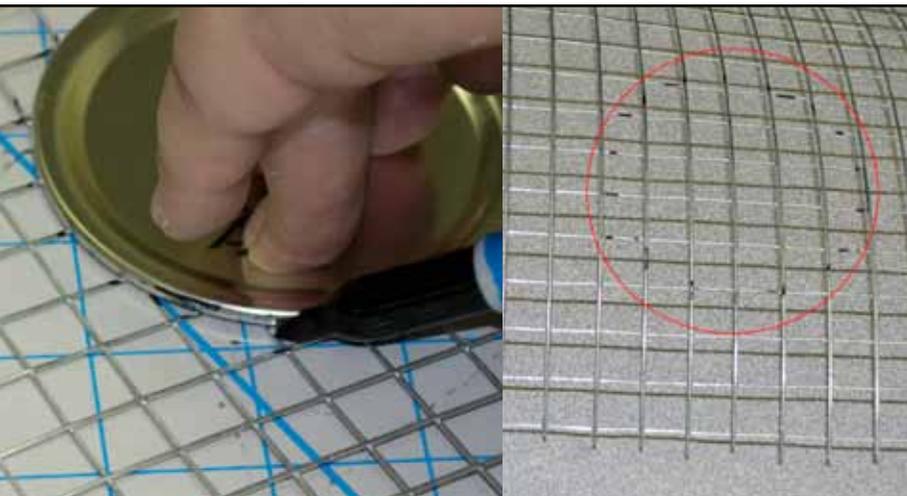

02

Pop out the metal piece of the screw-top canning band. Lay it down on top of your hardware cloth and trace around it with a permanent marker.

NOTE: The permanent marker won't show up easily with one tracing. The end goal of tracing your lid is to mark the points where you are going to cut the wire.

STEP 3



03

Cut the wire on the marks you made on the hardware cloth and cut out your circles.

WARNING:

Be sure to wear your work gloves when cutting the hardware cloth. The frayed edges after cutting are sharp and can cause injury. Also wear safety glasses as flying pieces of wire could be dangerous.

STEP 4



STEP 5



04

Flip your screw-top canning lid over and lay your cut out circle on the inside.

If your circle is too big and has edges sticking out that do not fit inside the lid, trim them with your wire cutters. Your circle should fit snug inside of the lid.

05

Flip the screw-top canning lid over and screw it on to your mason jar.

Arrange flowers, tools, or whatever you like in each of the holes of the hardware cloth.

Display and enjoy!